




your combi-microwave oven  
**description**

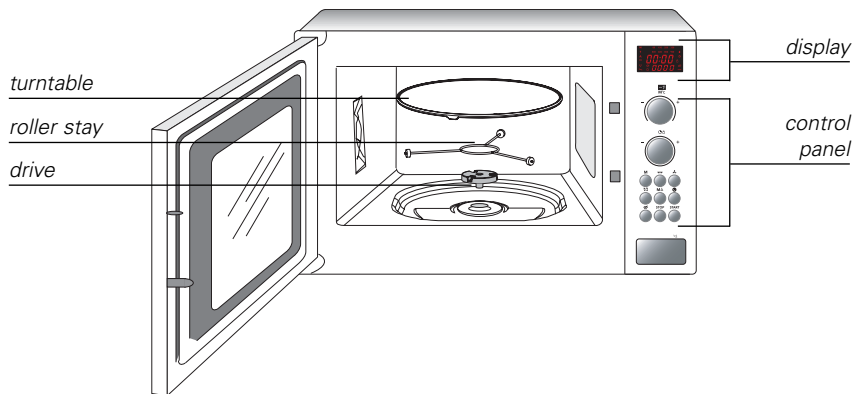

**control panel**

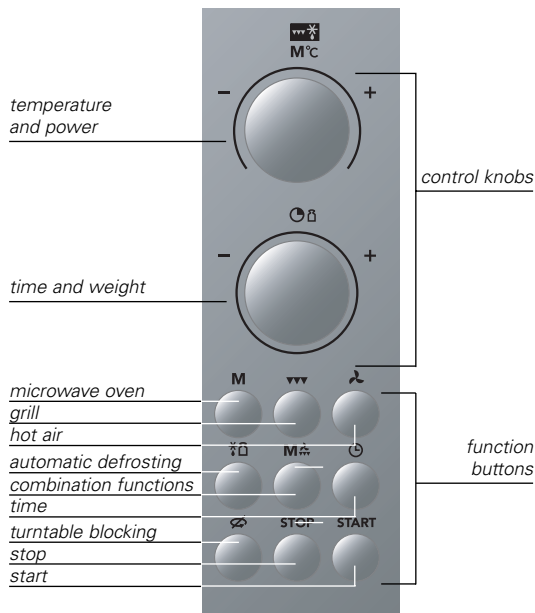

**display**

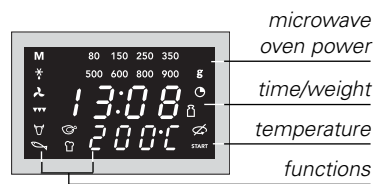

your combi-microwave oven  
**foreword**

The controls for this oven are very easy. What we particularly want to do in this manual is give you an idea of all the possibilities this appliance offers.

The various functions are arranged for easy-reference in the operation section. You will also find some useful tips.

Separate installation instructions have been enclosed for installing the appliance. These installation instructions also include safety instructions for installing and connecting the appliance.

Please keep this manual carefully, since any subsequent user will also find it very useful.

We wish you much pleasure with your combi-microwave oven!

your combi-microwave oven  
**contents**

---

<b>safety</b>	
what you should pay attention to	28 – 31
<b>bringing the oven into operation</b>	
before you start cooking	32
<b>operation</b>	
microwave function	33
defrost	34 - 35
baking	36
grilling	37
combi-cooking	38
combi-grilling	39
<b>cooking information</b>	
general	40
microwave power levels	41
defrost programs	42
accessories	43
<b>maintenance</b>	
cleaning	44
<b>faults</b>	
what should I do if...	45
<b>environmental aspects</b>	
disposal of packaging and appliance	45
<b>general</b>	
technical information	46

---

## safety what you should pay attention to

### general

This combi-microwave oven is extremely safe. As with all products, however, there are a number of things you need to bear in mind.

The appliance must only be installed by a registered installer. Minimum height from the floor: 85 cm.

Repairs must only be carried out by an authorised service engineer.

It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.

Do not use the appliance if it is damaged. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similiary qualified person in order to avoid a hazard.

*For safety tips in relation to the installation, we refer you to the instructions in the accompanying installation guide.*

The appliance should be disconnected from the mains before being repaired or cleaned. Remove the plug from the socket or turn the switch in the meter cupboard to zero.

For electrical safety reasons, the appliance must not be cleaned using high-pressure cleaners or steam cleaners.

Be careful with the leads of electrical appliances, such as mixers. They can get caught in the door of the hot combi-microwave oven.

This combi-microwave oven has been designed for domestic use. Use the appliance only for cooking food and only if it has been built in according to the regulations.

Do not use the hot air functions of your microwave oven at the same time as a pyrolytic or catalytic self cleaning function of your conventional oven.

safety

## what you should pay attention to

### when grilling or baking

*The oven is extremely well insulated.*

During use, the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

*Despite this, there is always some transfer of heat, as a result of which the outside of the oven heats up. This heating falls well within the acceptable limits.*

When cooking dishes that contain alcohol, the alcohol may evaporate due to the high temperature. The vapour could catch fire if it comes into contact with a hot heating element.

Do not use the combi-microwave oven for storing flammable or easily deformable materials.

Make sure that the food is always heated sufficiently. The time required for this depends on various factors, such as the quantity and type of food. Any bacteria in the food will only be killed if the food is heated to a temperature greater than 70 °C for at least 10 minutes. Allow the food to cook for a bit longer if you are not sure whether the food has been heated sufficiently.

Never heat food in sealed containers. Pressure will build up inside the container and may cause it to explode.

When heating food in plastic or paper containers, check the oven frequently due to the possibility of ignition.

Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

safety  
**what you should pay attention to**

when using the microwave function

Place a plastic spoon in the cup if you want to boil a liquid (water, for example).

The liquid may boil without you seeing any bubbles. As soon as you take the cup out of the oven, the liquid may suddenly start to boil violently and splash out of the cup, with the risk of you getting scalded.

The content of feeding bottles and baby food jars are to be stirred or shaken and the temperature is to be checked before consumption, in order to avoid burns.

If the door or door seals are damaged, the oven must not be operated until it has been repaired by a trained person.

Do not use the microwave oven if there is any (hidden) damage to the door, the hinges and catch (defective or loose) or the seal.

You should only use the microwave oven for defrosting and cooking food and not, for example, for drying clothes or paper. Clothes or paper could catch fire.

If you heat small quantities of dry or powdery products in the microwave oven (when drying herbs, for example), there is a chance that they will spontaneously combust.

If something in the combi-oven catches fire, switch the microwave oven off and take the plug out of the socket. Keep the oven door closed.

Do not switch the microwave function on if the combi-oven is empty. The oven could be damaged.

A microwave oven is not suitable for:

- preserving food
- cooking eggs in their shells, because they will burst due to the increase in pressure;
- heating oil for deep frying.

## safety

### what you should pay attention to

Remove metal twists from plastic bags and use dishes and plates that are suitable for the microwave oven.

You should only heat liquids in airtight packaging after first pricking a few holes in the packaging. This is because of the increase in pressure during heating.

Do not heat food for longer than is necessary; allow for the 'continued cooking'.

Prick the skin of meat, chicken and fish with a fork or other pointed object. This prevents these foods spattering.

You can open the door when the microwave function is switched on; the microwave function then switches off automatically and the time set is stopped.

Not all materials can be used in the combi-microwave oven. The table below shows which materials can be used and which materials cannot be used.

<b>material</b>	<b>microwave</b>	<b>hot air</b>	<b>grill</b>	<b>combi</b>
<i>paper</i>	yes*	no	no	no
<i>aluminium foil</i>	yes**	yes	yes	yes**
<i>cling film</i>	yes	no	no	no
<i>aluminium trays</i>	no	yes	yes	no
<i>freezer/microwave oven dishes</i>	yes	no	no	no
<i>heatproof plastic</i>	yes	no	no	no
<i>unglazed earthenware</i>	no	yes	yes	no
<i>metal cooking utensils</i>	no	yes	yes	no
<i>normal glass</i>	yes	no	no	no
<i>ovenproof glass and ceramics</i>	yes	yes	yes	yes
<i>metallic decoration</i>	no	yes	yes	no
<i>metallic twists</i>	no	yes	nvt	no
<i>mercury thermometer</i>	no	yes	yes	no
<i>bottle with narrow neck</i>	no	n/a	n/a	n/a
<i>roasting bags</i>	yes	yes	no	yes

\* Use undecorated kitchen paper to cover a dish or to place under bread when defrosting.

\*\* By covering thinner parts of foods (such as chicken legs), you prevent them from cooking too quickly.

## bringing the oven into operation before you start cooking

### cleaning the microwave oven and accessories

Remove the accessories from the combi-microwave oven and clean the oven with a mild cleaning agent.

Switch the hot-air function on for one hour at 250 °C (see page 12).


Protective greases used during manufacture will then be removed.

#### remark

When the oven is heated strongly for the first time, it will have a 'new' smell. This is normal. Switch the extractor hood on if necessary or open a window.

After the oven has cooled down, clean it with warm water.

### setting the time

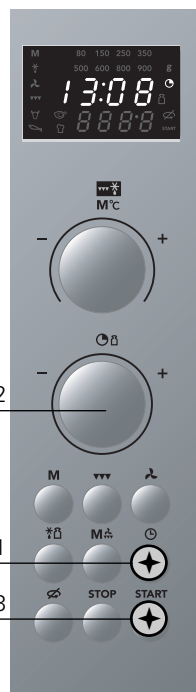

- 1 Press the time selector button.

*The clock symbol starts to blink.*

- 2 Set the correct time using the rotary knob.

*The start symbol starts to blink.*

- 3 Press 'start' and the time has been set. The Stop or time selector button could also be used.

*You can hide the time. Press the time selector button for 3 seconds and the time will disappear from the display. When you press the time selector switch again, the time will reappear.*




## introduction

 The combi-microwave oven can function as a microwave oven, hot-air oven and grill. In addition, you can choose the combination functions. These combine the microwave function with hot air or the grill.

The following pages contain instructions for selecting these functions. The cooking information describes possible applications.


## direct start (only microwave function)



- 1 Press 'start'.  
*The microwave function starts on full power for 30 seconds.*

You can increase the cooking time to a maximum of five minutes by pressing start several times.

## microwave function

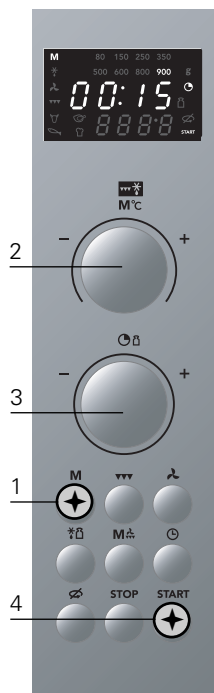


- 1 Press 'microwave oven'.  
*The display shows:*
  - the function selected;
  - the power level set;
  - the time symbol (blinks to indicate that you still have to set a time).
- 2 Set the power level required (if desired).  
*You can select from 80, 150, 250, 350, 500, 600, 800 and 900 Watt.*
- 3 Set the cooking time required.  
*In the display 'start' blinks, to indicate that the appliance is ready to be switched on.*
- 4 Press 'start' to switch the microwave oven on.  
*The display shows the remaining cooking time.*

*At the end of the cooking time, you will hear a signal. The microwave oven switches off. For a period of 10 minutes the signal sounds constantly at one minute intervals, until the stop button is pressed or the door is opened.*

## operation defrosting

### manual defrosting

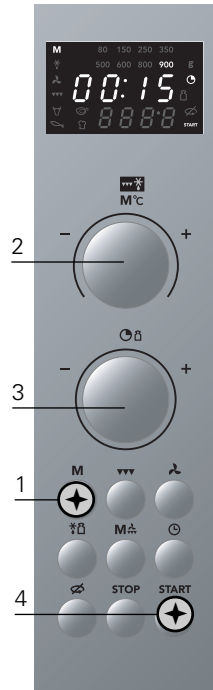

- 1 Press 'microwave oven'.

*The display shows:*

- the function selected;
- the power level set;
- the time symbol (blinks).

- 2 Set the power level to 150 watt.

*150 watt is highly suitable for defrosting.*

- 3 Set the defrosting time required.


*In the display 'start' blinks, to indicate that the appliance is ready to be switched on.*

- 4 Press 'start' to switch the microwave oven on.

*The display shows the defrosting time remaining.*

*At the end of the defrosting time, you will hear a signal. The microwave oven switches off. For a period of 10 minutes the signal sounds constantly at one minute intervals, until the stop button is pressed or the door is opened.*

## defrosting with the defrost program

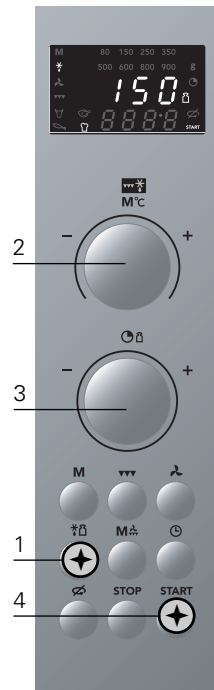

- 1 Press 'automatic defrost'.

*The display shows:*

- the function selected;
- the defrost program set;
- the weight symbol (blinks).

- 2 Set the defrost program required.

*You can choose from meat, poultry, fish or bread.*

- 3 Set the weight.

*In the display 'start' blinks, to indicate that the appliance is ready to be switched on.*

- 4 Press 'start' to switch the microwave oven on.

*The display shows the defrosting time remaining.*

*To draw your attention to the fact that you should turn the food, halfway through the defrost time a signal sounds.*


*Turn the food. Close the door and press 'start'.*

*If you forget to turn the food, the defrost program carries on automatically.*

*At the end of the defrost time, you hear a signal. The microwave oven switches off. For a period of 10 minutes the signal sounds at one minute intervals, until the stop button is pressed or the door is opened.*

operation  
**baking**


baking with hot air

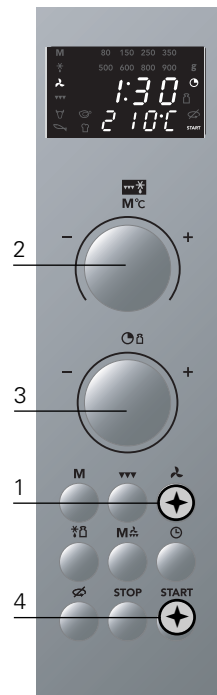

- 1 Press 'hot air'.  
*The display shows:*
    - the function selected;
    - a temperature (depending on the setting of the temperature/power level knob);
    - the time symbol (blinks).
  - 2 Set the temperature.  
*The temperature can be set from 50 to 250 degrees.*
  - 3 Set the cooking time required.  
*In the display 'start' blinks, to indicate that the appliance is ready to be switched on.*
  - 4 Press 'start' to switch the oven on.  
*The display shows the remaining cooking time.*
- '°C' keeps blinking until the combi-microwave oven is at temperature. The oven then gives a sound signal.*

*At the end of the cooking time, you hear a signal. The oven switches off. For a period of 10 minutes the signal sounds at one minute intervals, until the stop button is pressed or the door is opened.*

## grilling

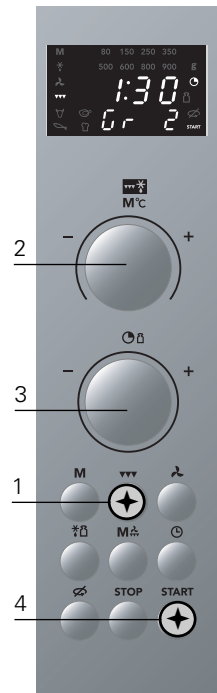

- 1 Press 'grill'.

*The display shows:*

- the function selected;
- a grill setting (depending on the setting of the temperature/power level knob);
- the time symbol (blinks).

- 2 Set the grill setting required.

*You can choose from the functions Gr1, Gr2 and Gr3. Gr3 is suitable for most foods. For larger quantities, you can select a lower grill setting.*

- 3 Set the cooking time required.

*In the display 'start' blinks, to indicate that the appliance is ready to be switched on.*


- 4 Press 'start' to switch the grill on.

*The display shows the remaining cooking time.*

*At the end of the cooking time, you hear a signal. The grill switches off. For a period of 10 minutes the signal sounds constantly at one minute intervals, until the stop button is pressed or the door is opened.*

## operation combi-cooking

### combi-cooking

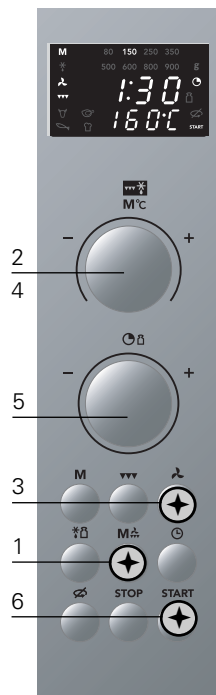


- 1 Select 'combi'.  
*The display shows:*  
– the function selected (the grill and hot air symbols blink);  
– the power level set.
- 2 Set the microwave power level required.  
*A power level of up to 500 Watts can be set.*
- 3 Select 'hot air'.  
*The display shows:*  
– the function selected (hot air).  
– a temperature;  
– the time symbol (blinks).
- 4 Set the temperature.  
*The temperature can be set from 50 to 250 °C.*
- 5 Set the cooking time required.  
*In the display 'start' blinks, to indicate that the appliance is ready to be switched on.*
- 6 Press 'start' to switch the oven on.  
*The display shows the remaining cooking time.*

'°C' keeps blinking until the combi-microwave oven is at temperature. The oven then gives a sound signal.

At the end of the cooking time, you hear a signal. The oven switches off. For a period of 10 minutes the signal sounds at one minute intervals, until the stop button is pressed or the door is opened.

## combi-grilling

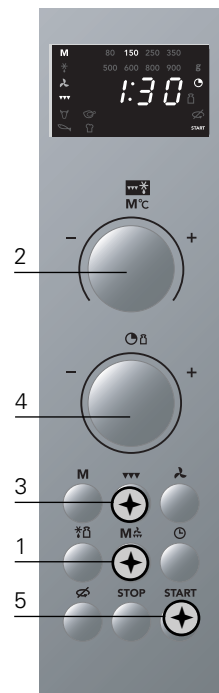


- 1 Select 'combi'.  
*The display shows:*
  - the function selected (the grill and hot-air symbols blink);
  - the power level.
- 2 Set the microwave power level required.  
*A power level of up to 500 Watts can be set.*
- 3 Select 'grilling'.  
*The display shows:*
  - the function (on the combi-setting you cannot set a grill function yourself);
  - the time symbol (blinks).
4. Set the cooking time required.  
*In the display 'start' blinks, to indicate that the appliance is ready to be switched on.*
5. Press 'start' to switch the oven on.  
*The display shows the cooking time remaining.*

*At the end of the cooking time, you hear a signal. The grill switches off. For a period of 10 minutes the signal sounds at one minute intervals, until the stop button is pressed or the door is opened.*

## cooking information

### general

#### checking the food

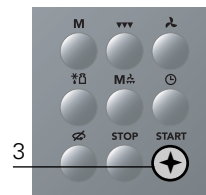


- 1 Open the door.  
*The microwave oven switches off. The settings and the remaining cooking time are retained.*
- 2 Close the door to continue cooking.
- 3 Press the start button.

or:


- 1 Press the stop button.  
*The microwave oven switches off. The settings and the remaining cooking time are retained.*
- 2 Open the door.
- 3 Close the door to continue cooking.
- 4 Press the start button.

#### interrupting the cooking/baking process

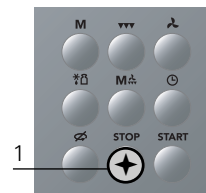

- 1 Press stop twice.

#### blocking the turntable

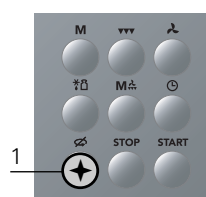

Only block the turntable when you are using square or long oven dishes that are larger than the turntable.

- 1 Press 'stop turntable' to block the turntable.

*When cooking with a blocked turntable, allow for the fact that the food will have to be turned or stirred halfway through the cooking time to get an even distribution of the heat.*



cooking information  
**microwave oven power levels**

You can see from the table below from which power levels you can choose and for which foods the power levels are suitable.

900 Watt	– heating liquids
800 Watt	– fast cooking and searing foods – cooking vegetables – melting butter and margarine
600 Watt	– defrosting and heating frozen dishes
500 Watt	– heating food on plates – cooking bubble and squeak – cooking egg dishes
350 Watt	– cooking food right through – cooking delicate foods
250 Watt	– heating baby food – cooking rice right through – warming delicate foods up
150 Watt	– defrosting meat, fish, bread
80 Watt	– defrosting cheese, cream, butter – defrosting fruit and (cream) cakes – allowing dough to rise – bringing cold foods and drinks up to temperature





## cooking information

### defrost programs

#### automatic defrost programs

The appliance has automatic defrost programs. Once you have selected the defrost program you want, all you have to do is set the weight of the food. The appliance calculates the defrosting time itself.

The table below shows which foods you can defrost with these programs.

<b>symbol</b>	<b>stypе of food</b>	<b>weight</b>
	<i>meat</i>	<i>100 - 2000 g</i>
	<i>poultry <sup>1)</sup></i>	<i>100 - 2000 g</i>
	<i>fish <sup>2)</sup></i>	<i>100 - 1000 g</i>
	<i>bread</i>	<i>100 - 1000 g</i>

*<sup>1)</sup> Cover wings and legs with aluminium foil before defrosting.*

*<sup>2)</sup> Cover the tail with aluminium foil before defrosting. Make sure that the aluminium foil cannot come into contact with the walls of the microwave oven!*


Place the unwrapped, frozen food on an upturned plate. Place the plate in the oven dish, so that any liquid that defrosts can drain away.

Place bread between two sheets of undecorated kitchen paper.

When defrosting, remember to keep to the recommended 'rest' times (rule of thumb: defrost time = rest time).

Halfway through the defrosting time, a signal will be heard. The food can be turned. If possible, divide the food into smaller pieces. Remove parts that have already defrosted.

### glass turntable

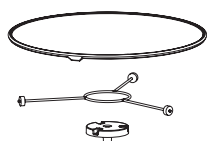


You can place food directly on the turntable when using the microwave function.

**NB:**

 Do not use the microwave oven without the turntable or roller stay.

### grid




The grid has two positions:

- high;
- low.

The high position is meant for grilling flat foods; the low position is meant for cooking with hot air, combi or grilling thick foods.

### glass dish for microwave oven and oven

 

The dish is ovenproof, and so it can also be used when grilling and baking.

The dish can be placed under the grid to act as a drip-tray.

## maintenance cleaning

Remove the plug from the socket or turn the switch in the meter cupboard to zero before you start cleaning the microwave oven.

Clean the inside immediately after use. Use a damp cloth to remove any condensation, liquid that has boiled over and food remains. Crumbs and liquid that remain behind absorb microwave energy and lengthen cooking times.

The grill can be folded down so that you can also clean the oven ceiling above the grill element.

Clean the inside and outside of the oven regularly using soapy water and dry it thoroughly with a dry cloth.

Make sure that the microwave distributor cover (inside the oven on the right) is clean. A cover which is not clean may cause sparking.

Clean the accessories regularly; use soapy water and a brush and dry the accessories thoroughly with a dry cloth. The accessories may also be washed in a dishwasher.

Odours will disappear if you put a glass of vinegar or water with lemon juice added in the oven space. Switch the microwave on for two minutes on full power. Then wipe with a damp cloth.

Check the door catch and the door seal regularly for damage.

Do not use the combi-microwave oven if the door or door catch are damaged.

## faults what should I do if...

If the appliance does not work properly, this does not always mean that it is defective. Try to deal with the problem yourself first. Phone the service department if the advice given below does not help.

- Is the plug in the socket?
- Is the door closed properly?
- Is the fuse in the meter cupboard defective?
- Have the power level and cooking time been set properly?
- Is there anything in the microwave oven that should not be there?
- Have you used the correct utensils?
- Are the ventilation openings blocked?
- Is the food sufficiently defrosted?
- Did you turn or stir the food during cooking?

## environmental aspects disposal of packaging and appliance

The appliance's packaging is recyclable. The following may be used:

- cardboard;
- polyethylene film (PE);
- CFC-free polystyrene (PS rigid foam).

Dispose of these materials responsibly and in accordance with government regulations.

The government can also provide information about the responsible disposal of discarded domestic appliances.

general  
**technical information**

Power supply	220-240 V 50 Hz
Connected load	3050 W
Microwave oven output (IEC 60705)	900 W
Fuse	16 A
Dimensions (hxwxd)	460 x 592 x 507 mm
Volume of oven space	30 L
Weight	32,5 kg